

## Portable Earth Leakage Unit (ELP15)



ELP15

### Features

- Three unswitched sockets
- QF17 sensitive earth leakage (30 mA sensitivity)
- Earth leakage unit with overload trip VC 8035
- Test button located in front panel
- 5 kA rated interrupting capacity
- Three 15 A standard round pin socket outlets provided
- A 1.5 metre cable with moulded 16 A plug provided
- Unique recessed design protects earth leakage handle and socket outlets from damage
- Sturdy carry handle

### Applications

- A robust portable earth leakage unit specifically designed for use in construction, mining and industry for added safety and protection.

### Technical Data

Portable Earth Leakage Unit (ELP15)	
Rated Voltage (V)	240 V 50 Hz
Current Rating	15 A
Rated Interrupting Capacity	5 kA / 6 kA
Output Socket Type	SANS 164-1 (Standard)
Sensitivity (Earth Leakage)	30 mA

### Operating Safety Guidelines

Plug the ELP into a standard earthed 16 A socket outlet:




1. Check that the earth leakage unit action is correct by switching the handle ON and OFF
2. With the ELP energised, test the ELP earth leakage function: Switch the earth leakage handle to the ON position and press the test button. The ELP earth leakage MUST trip. Replace the earth leakage if it does NOT trip.
3. Reset earth leakage function

### Ordering Information

Portable Earth Leakage Units AC 15 A 50 Hz, 5 kA @ 240 V, 30 mA			
Type	Description	Std. Pack	Order No.
ELP15	Fitted with 3-standard 15 A round pin socket outlets & 15 A Overload Protection	1	LP36K15

## Portable Earth Leakage Unit (ELP15)

### Dimensional Drawings: ELP15

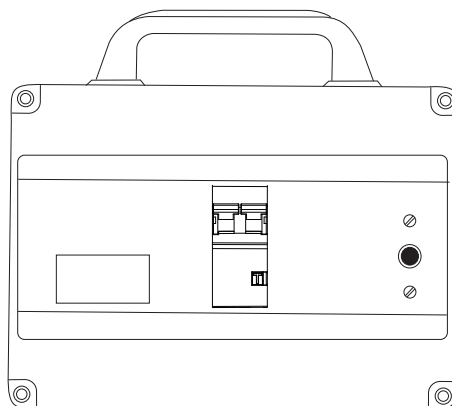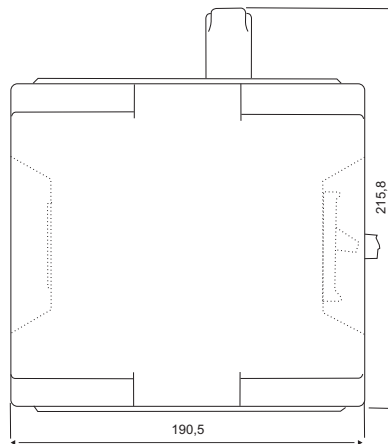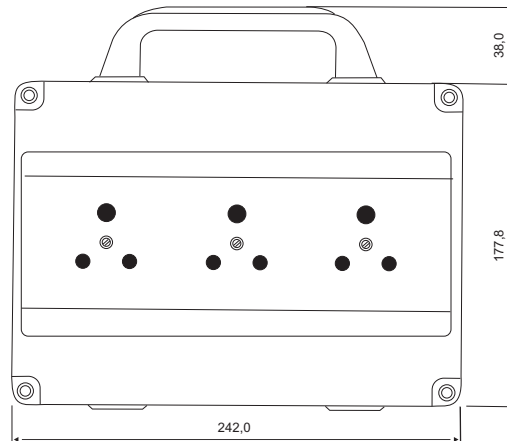

© CBI (Pty) Ltd. All Rights Reserved.

Please review our Customer Terms and Conditions on [www.cbi-lowvoltage.co.za](http://www.cbi-lowvoltage.co.za)

All rights reserved. Unless otherwise indicated, all materials on these pages are copyrighted by CBI (Pty) Ltd. No part of these pages, either text or image may be used for any purpose other than personal use. Therefore, reproduction, modification, storage in a retrieval system or retransmission, in any form or by any means, electronic, mechanical or otherwise, for reasons other than personal use, is strictly prohibited without prior written permission. CBI (Pty) Ltd reserves the right to alter any details of this document without notice and while every effort is made to ensure the accuracy of the content, no warranty is given as to accuracy of this document and no responsibility will be accepted for error or misinterpretation and any resulting loss.

#### AUSTRALIA

**CBI-electric: Australia**  
27 Wedgewood Rd, Hallam  
Victoria 3803 Australia  
Tel: +61 3 8752 9300  
Fax: +61 3 9796 5407  
Email: [sales@cbi-electric.com.au](mailto:sales@cbi-electric.com.au)  
Website: [www.cbi-electric.com.au](http://www.cbi-electric.com.au)

#### SOUTH AFRICA

**CBI-electric: low voltage**  
Tripswitch Drive Elandsfontein  
Gauteng South Africa  
Tel: +27 11 928 2000  
Fax: + 27 11 392 2354  
Email: [cbi@cbi-electric.com](mailto:cbi@cbi-electric.com)  
[internationalsales@cbi-electric.com](mailto:internationalsales@cbi-electric.com)  
Website: [www.cbi-lowvoltage.co.za](http://www.cbi-lowvoltage.co.za)

#### USA

**CBI-electric: North America**  
35 E. Uwchlan Ave Suite 328  
Exton PA 19341 USA  
Tel: +1 610 524 9949  
Fax: +1 610 524 9945  
E-mail: [info@cbibreakers.com](mailto:info@cbibreakers.com)  
Website: [www.cbibreakers.com](http://www.cbibreakers.com)